

Bipod Lock Basic Installation




1) Using a ¼ inch nut driver or socket loosen the nut holding the knurled knob.



2) Locate the rear of the pin as shown and place your finger over the end to prevent it from falling out.




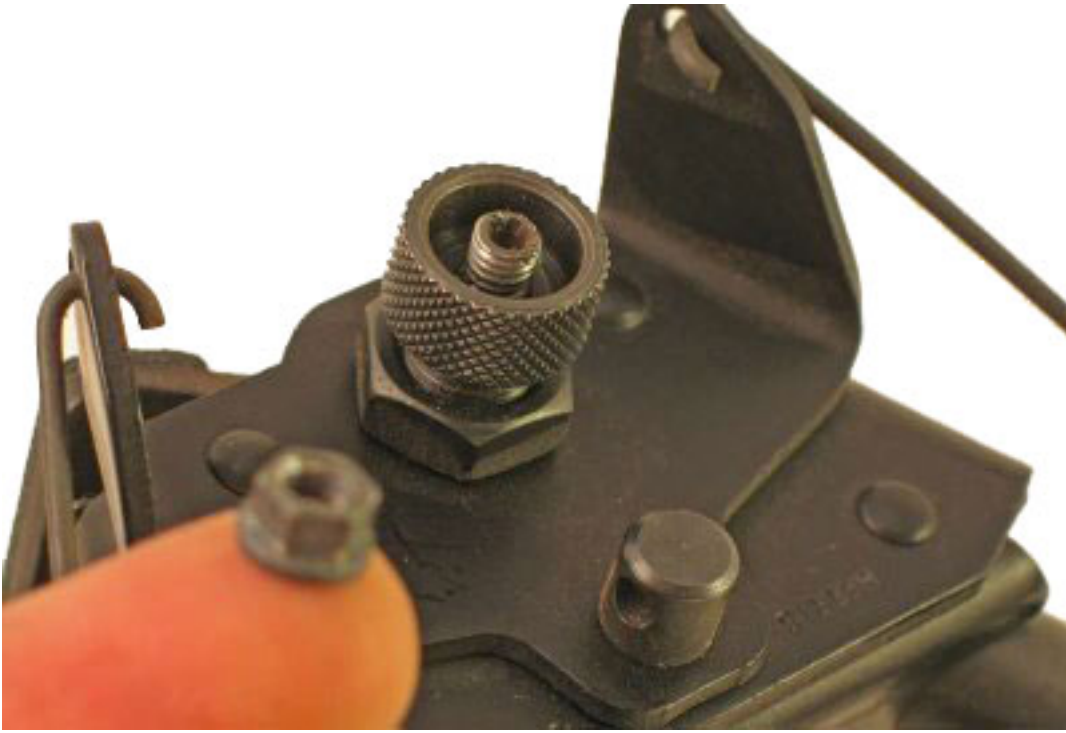

3) Remove the knurled nut.



4) Place the supplied spacer over the threaded shaft.

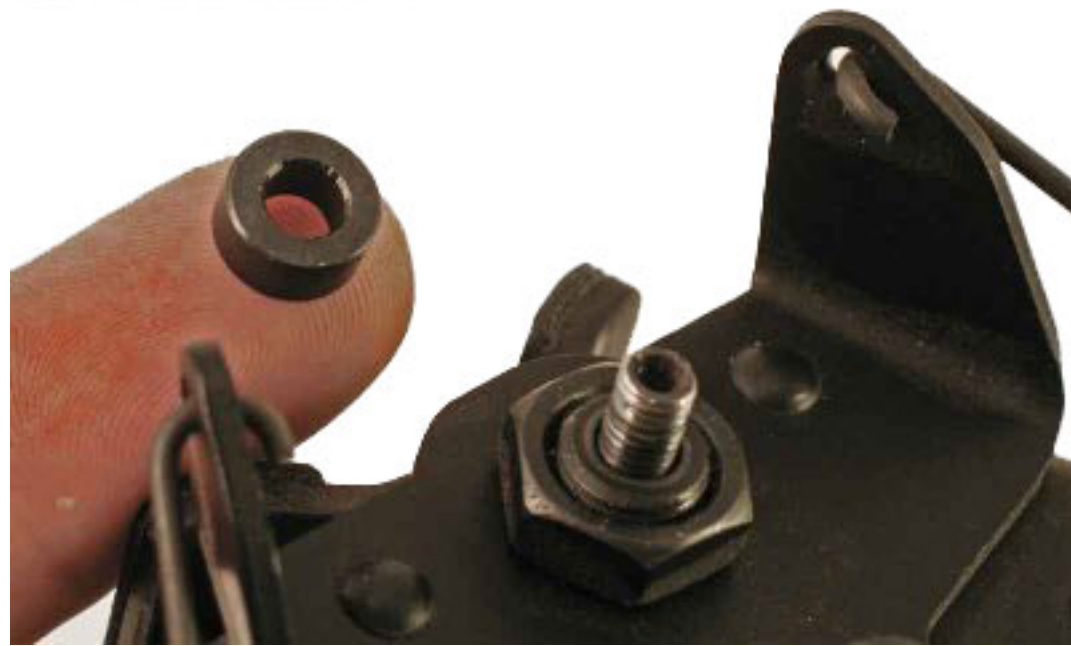

5) Screw on bipod adjusting handle until snug. Do not over tighten.



You may now loosen the handle to adjust your bipod and re-slug when done.