


PARTS LIST—MOSSBERG MODELS 44B 44US(a), 44US(b), 44US(c), 44US(d)

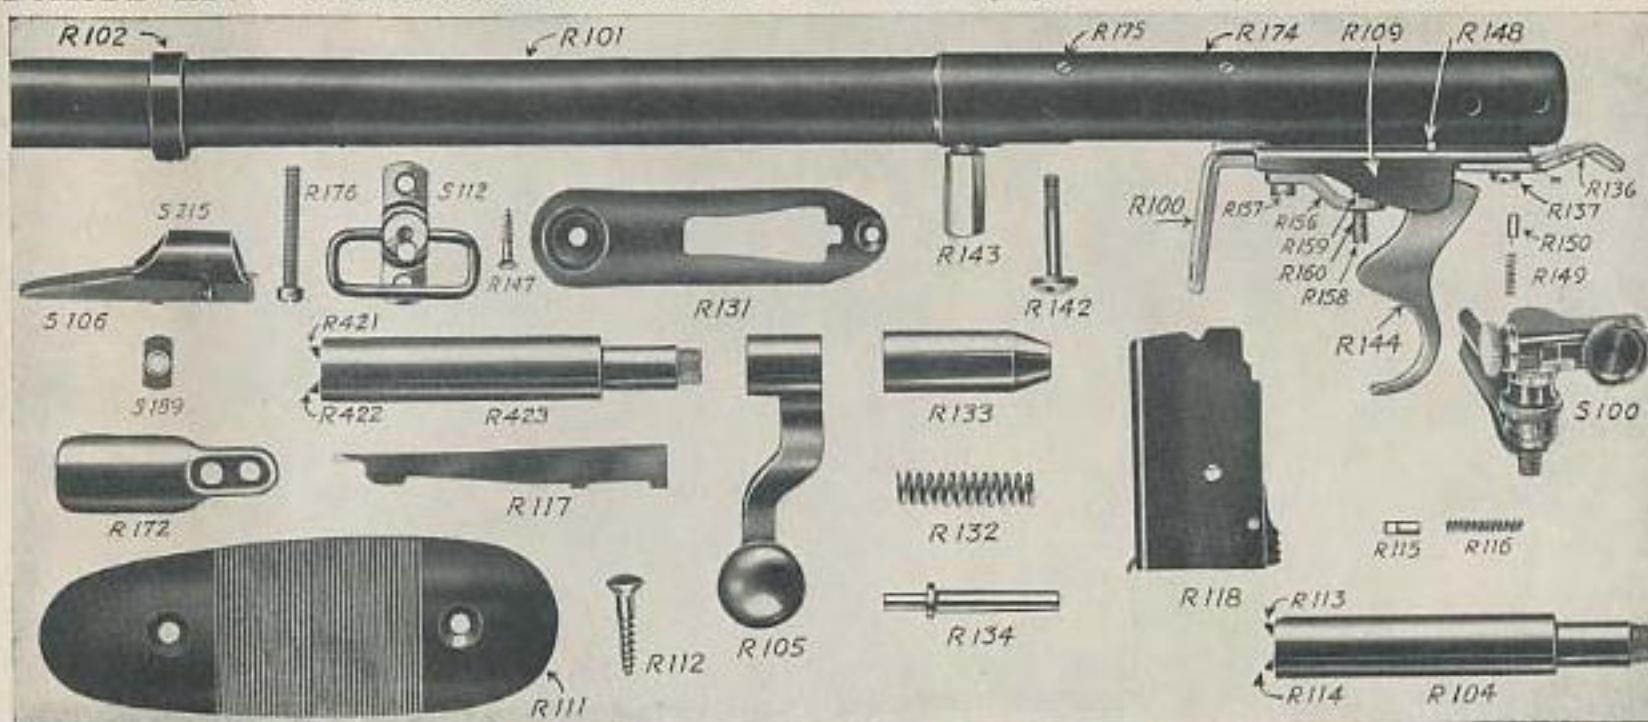

PART NO.	NAME	PRICE EACH	PART NO.	NAME	PRICE EACH	PART NO.	NAME	PRICE EACH	PART NO.	NAME	PRICE EACH
R100	Angle Bar	.40	R131	Magazine Stock Plate	.40	R150	Trigger Spring Plunger	.20	R197	Receiver, Models 44US(b), 44US(c) 44US(d)	6.00
R101	Barrel	11.00	R132	Mainspring	.30	R156	Trigger Pull Adj. Bracket	.35	R423	Bolt Body, Models 44US(b), 44US(c), 44US(d)	3.00
R102	Barrel Band	.95	R133	Mainspring Cap	.65	R157	Trigger Pull Adj. Brk. Screw	.25	R427	Bolt Assembly, Models 44US(b), 44US(c), 44US(d)	8.00
R103	Bolt Assembly substitute (Model 44US(a))	8.00	R134	Mainspring Plunger	.25	R158	Trigger Pull Adj. Screw	.25	R518	Stock, Models 44US(b), 44US(c) with trigger guard and butt plate fitted	13.00
R104	Bolt Body, Model 44US(a)	2.10	R135	Safety	.70	R159	Trigger Pull Adj. Plunger	.25	R620	Stock, Model 44US(d) with trigger guard, butt plate, and swivels fitted	13.00
R105	Bolt Lever	1.40	R136	Safety Screw	.20	R160	Trigger Pull Adj. Spring	.20	Barrel & Receiver		14.00
R109	Bracket	1.40	R137	Take Down Screw	.40	R172	Cover Plate	.40	NO ORDERS ACCEPTED UNDER \$1.00		
R111	Butt Plate	.35	R142	Take Down Stud	.90	R173	Cover Plate Screw(2) each	.20	Give exact Model No. stamped on barrel.		
R112	Butt Plate Screw (2) each	.20	R144	Trigger	1.00	R174	Receiver, Model 44US(c) only	6.00			
R113	Extractor, right	.	R145	Trigger Guard	.70	R175	Dummy Screw(2) each	.20			
R114	Extractor, left	.	R146	Trigger Guard Screw, front	.20	R176	Barrel Band Screw	.25			
R115	Extractor Plunger	.	R147	Trig. Guard Screw, rear, and Swivel Screw	.20	R195	Stock, Model 44US(a), with trigger guard, butt plate, and swivels fitted	13.00			
R116	Extractor Spring	.20	R148	Trigger Pin	.20						
R117	Firing Pin	1.40	R149	Trigger Spring	.20						
R118	Magazine Assembly	2.50									

*These parts no longer available but we can fit a different bolt to your rifle if you return it to the factory.



MOSSBERG MODEL 44US

Data: Mossberg Model 44 US

Origin: United States

Manufacturer: O. F. Mossberg & Sons, Inc.
North Haven, Connecticut

Cartridge: 22 Long Rifle

Magazine capacity: 7 rounds

Over-all length: 42½ inches

Barrel length: 26 inches

Weight: 7½ pounds


A slight re-design of the earlier Model 44B, the 44 US was primarily used for military marksmanship training during World War II. The one shown in the photos is marked "U.S. Property." Aside from its plain, military-style stock, it is practically identical to the other Mossberg bolt action 22 rifles of this time period, and the instructions can be applied generally to most of these. The Model 44 US was made from 1943 to 1948, and is now prized by shooters and military collectors.

Disassembly:

1. Remove the magazine. Open the bolt, hold the trigger to the rear, and withdraw the bolt from the rear of the receiver. The aperture sight can be pivoted around to the side for clearance.




2. Turn the bolt handle clockwise (rear view) to allow the striker to move forward to the fired position.

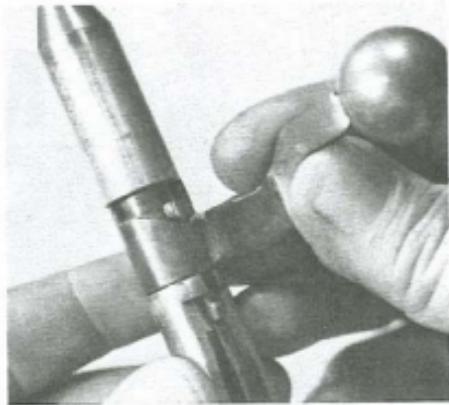


3. Grip the bolt and the rear domed endpiece firmly, and unscrew the endpiece from the rear of the bolt. **Caution:** The striker spring is under some tension, so keep the endpiece under control. After it is removed, the spring and guide are easily taken out.




- 4.** Move the bolt handle sleeve toward the rear, the striker moving with it. When the sleeve has enough clearance, remove it toward the rear.

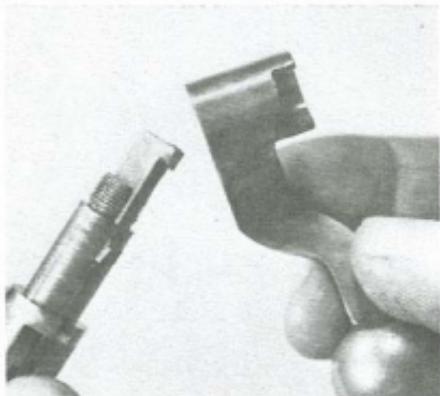

- 5.** Remove the striker/firing pin unit from the bolt.

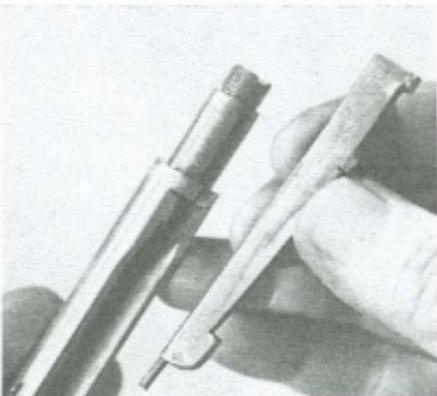


- 6.** The twin extractors can be removed by inserting the tip of a small screwdriver between each extractor and its plunger, pushing the plunger toward the rear, and lifting the extractor out of its recess. Caution: Take care the screwdriver doesn't slip during this operation, and ease the plungers and springs out for removal.

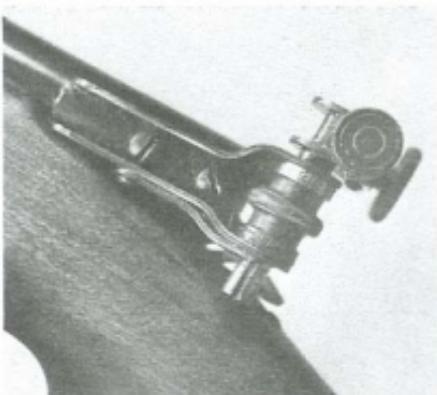

- 7.** The rear sight is removable by taking out the two large screws on the left side at the rear of the receiver. Further disassembly of the sight is not recommended.

8. Loosen the front sling loop screw, and back out the sling loop. The rebated screw shaft will keep the unit on the stock. Back out the main stock mounting screw, located in the forward portion of the magazine plate on the underside, and separate the action from the stock. The barrel band can be taken off only after the front sight is drifted out of its dovetail.

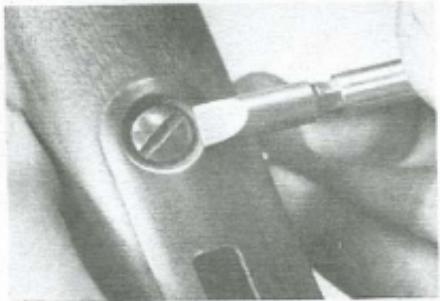

9. Remove the screw at the front of the trigger bracket, on the underside of the receiver.




10. Remove the screw at the rear of the trigger bracket. This screw also is the pivot for the safety lever.





Reassembly Tips:

- 1.** When replacing the trigger and safety system on the underside of the receiver, be sure the cross-pin at the top of the trigger is positioned in its groove on the receiver, and install the front screw first. When inserting the safety lever, use a small screwdriver to lift the trigger spring plunger onto the front tab of the safety lever before installing the rear screw.

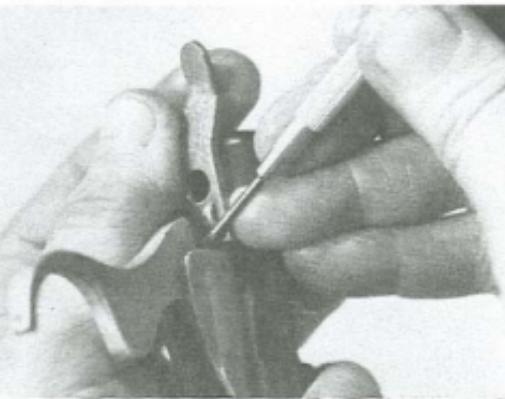

- 2.** When replacing the action in the stock, the barrel ring, or band, must be oriented so its screw hole is at the bottom, and aligned with the front sling loop screw.

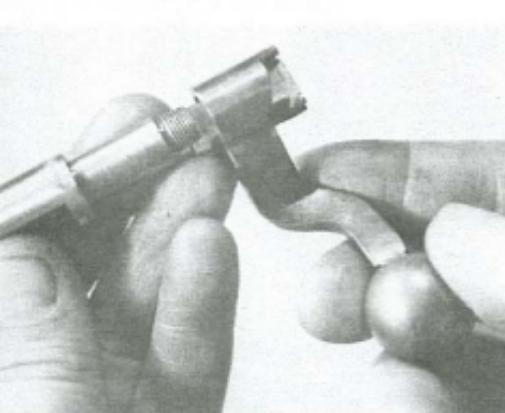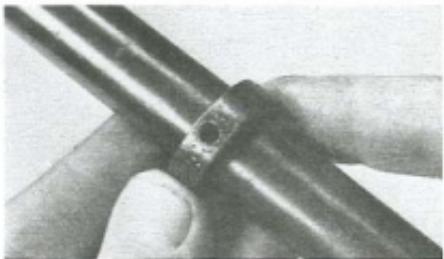

- 3.** When replacing the striker and the bolt handle sleeve, note that the sleeve must be fitted onto the rear of the striker before the striker is fully inserted into the bolt.



- 4.** Before the bolt is reinserted into the receiver, it must be recocked by firmly gripping the forward portion of the bolt and turning the bolt handle counter-clockwise (rear view) until the striker lug is brought back to the cocked position, as shown.